




Asus U50F-RBBAG05 Upper Case Replacement

This guide is to help you remove/replace the upper case of your Asus U50F-RBBAG05.

Written By: Kelly Greeling

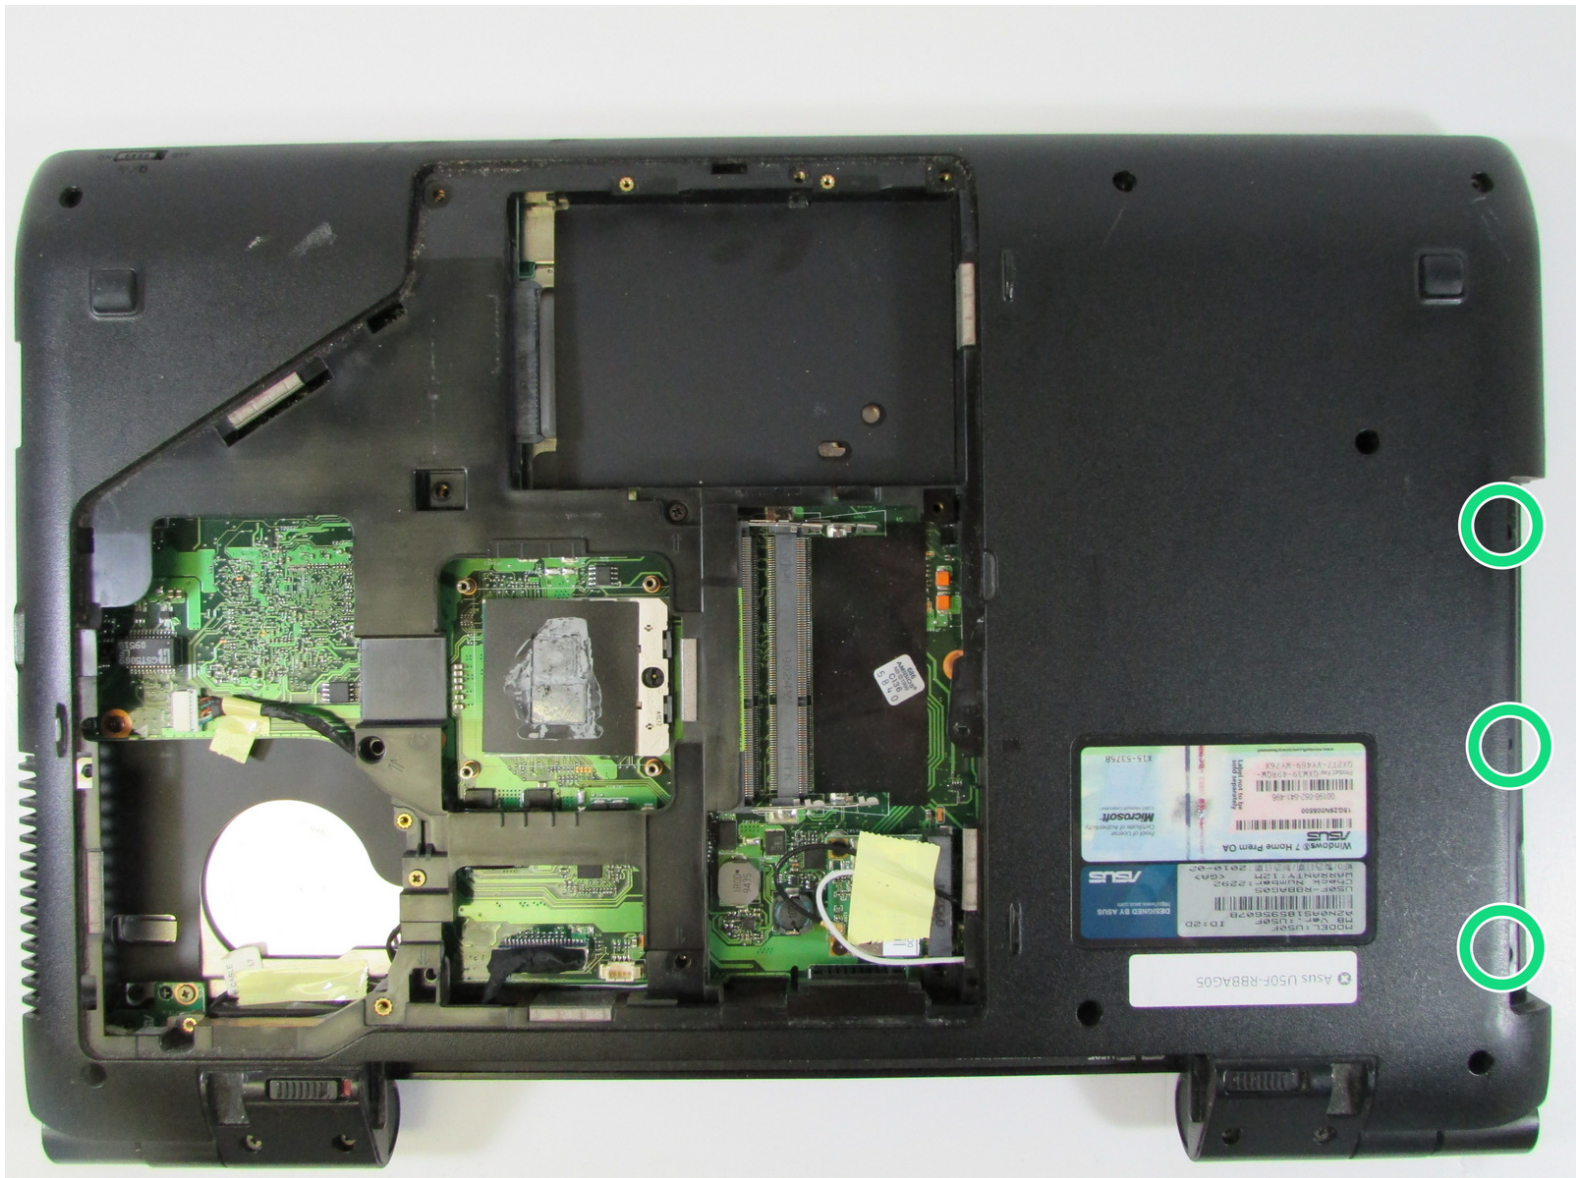


INTRODUCTION

We are going to teach you how to remove/replace the Upper Case of your Asus U50F-RBBAG05.

TOOLS:


- [iFixit Opening Tools](#) (1)
 - [Philips Head Screwdriver: Size PH1](#) (1)
 - [Spudger](#) (1)
 - [dry erase marker](#) (1)
 - [Magnetic Project Mat](#) (1)
 - [Jimmy](#) (1)
 - [iSesamo Opening Tool](#) (1)
-

Step 1 — Battery

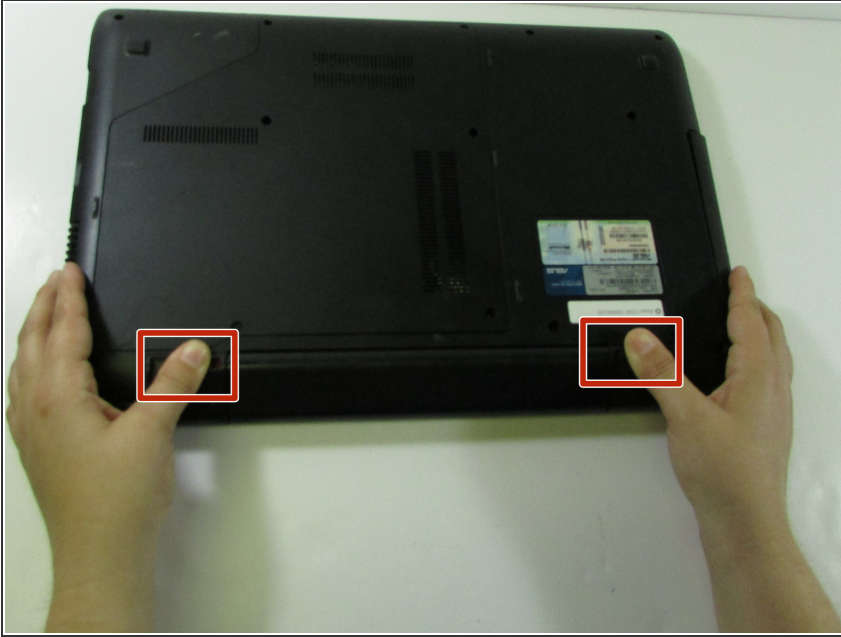


- First Step:
- Slide the tabs of the side of the battery back
- There is one on the left that can be locked into position (when it is showing red, it is unlocked)
- The tab on right you have to hold back while removing the battery.

Step 2

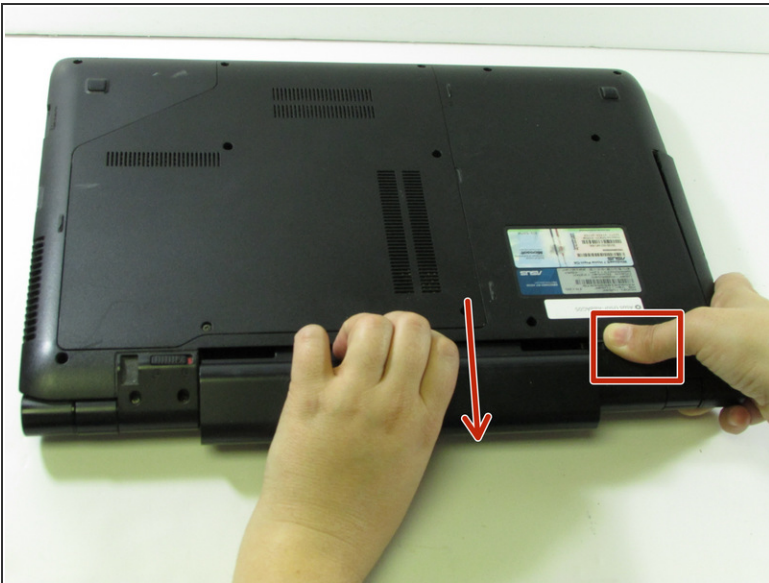

- The tab on right you have to hold back while removing the battery.
- Pull the battery out.

Step 3 — Underpanel

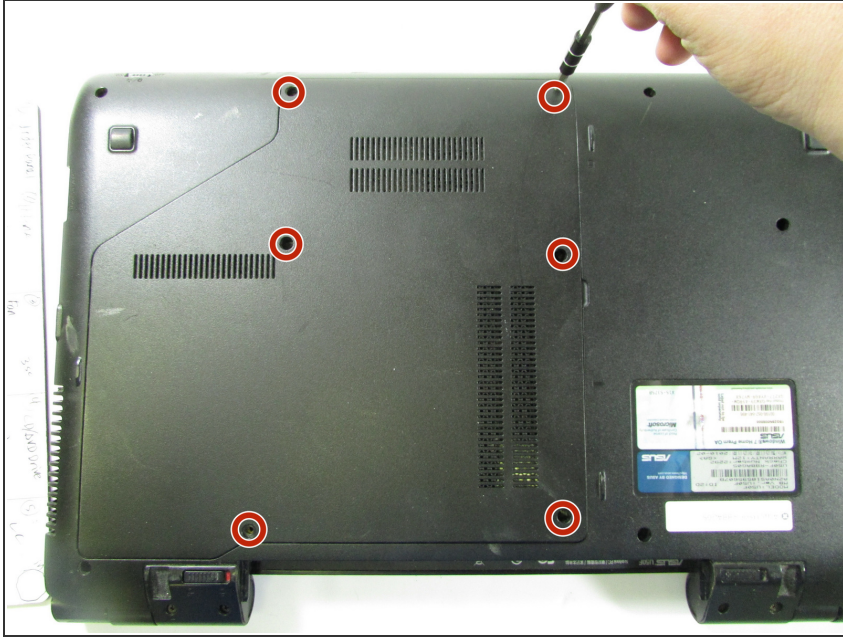



- Remove 6 screws

Step 4




- Pry the lower panel up with your fingernail/spudger.

Step 5

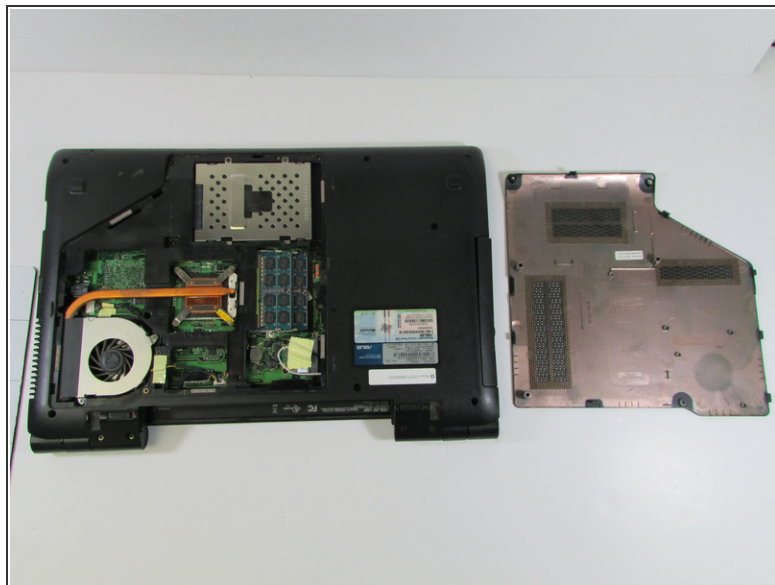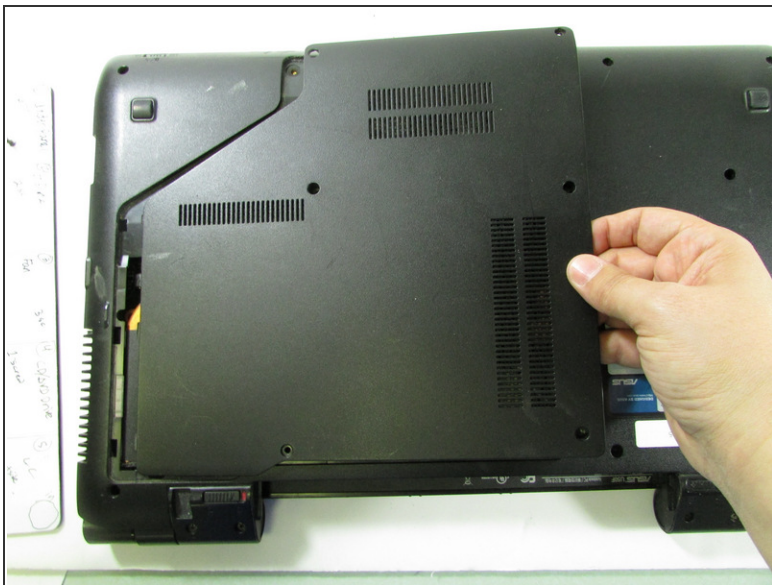


- Lift up and remove

Step 6 — Hard Drive

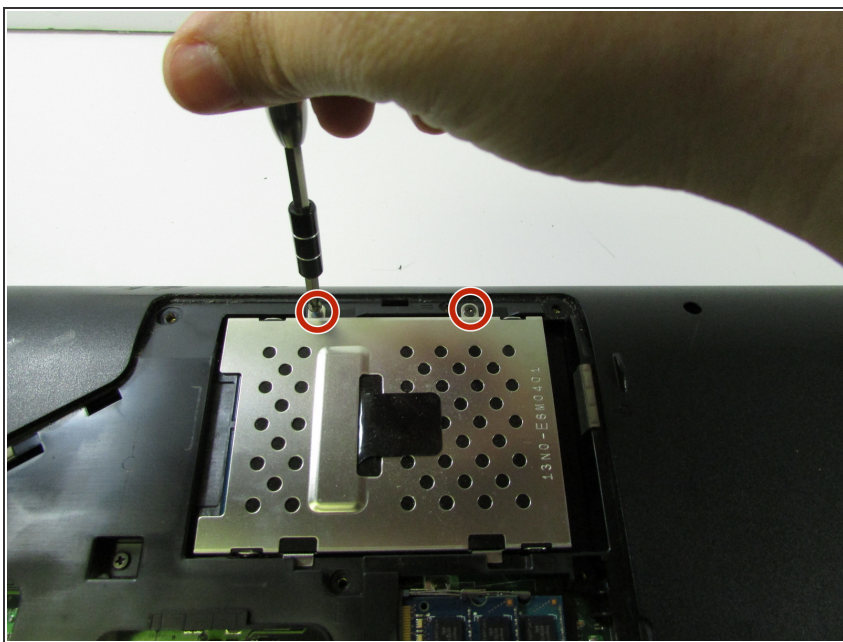



- Remove 2 screws

Step 7

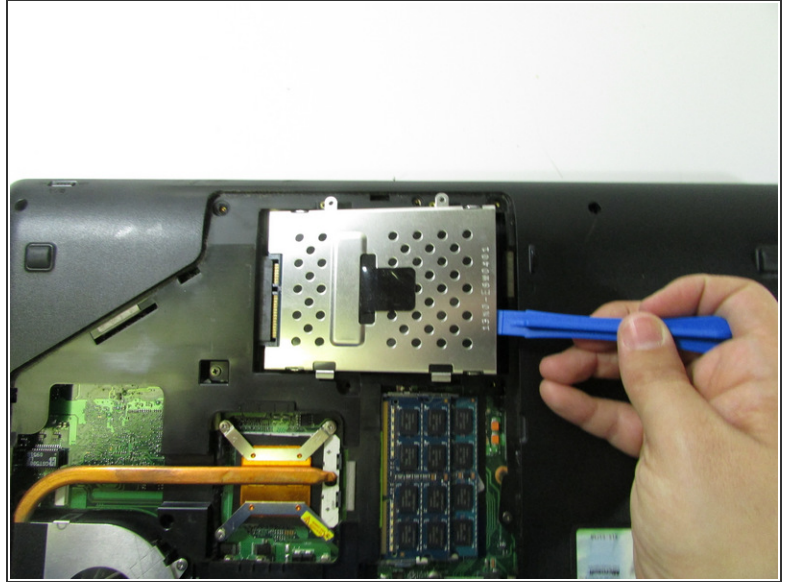



- Push back the hard drive
- Pry up with spudger (or fingernail)

Step 8

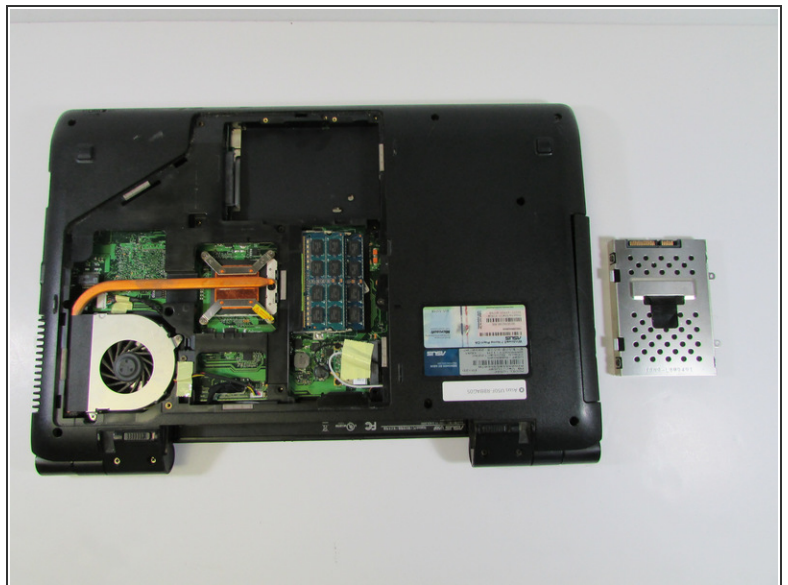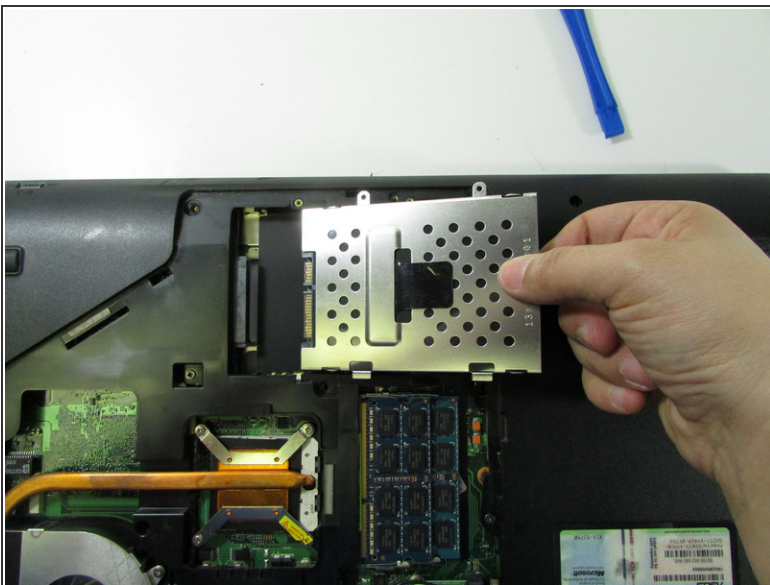


- Pull back and up
- Remove completely

Step 9 — Random Access Memory (RAM)

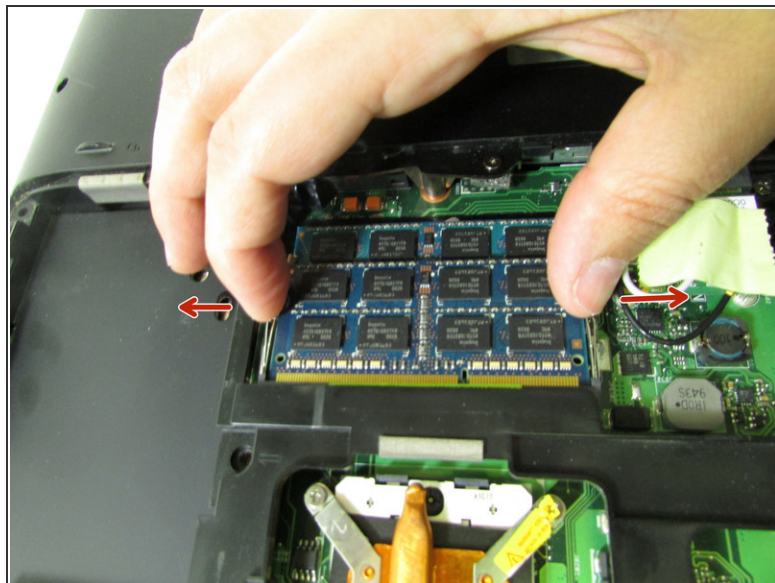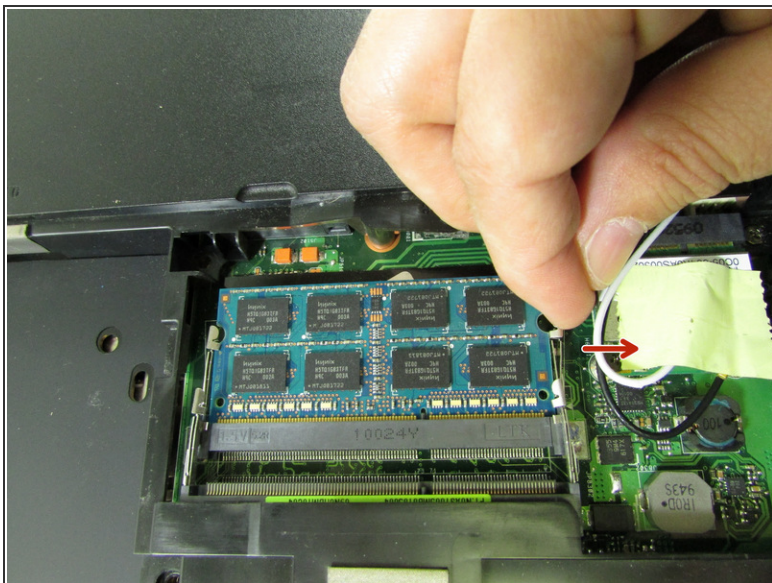


- Push back on the silver clips until you hear/feel a pop.

Step 10

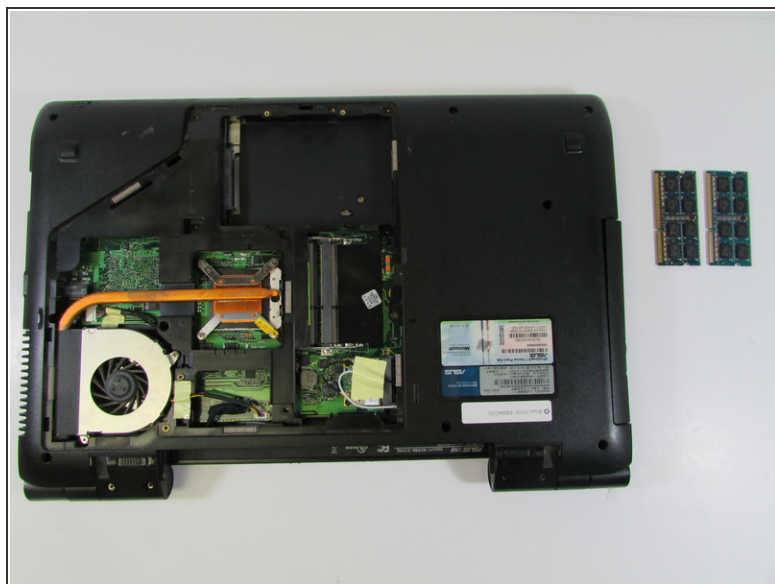

- Pull back RAM card and remove
- Repeat for lower RAM card

Step 11 — Optical Drive

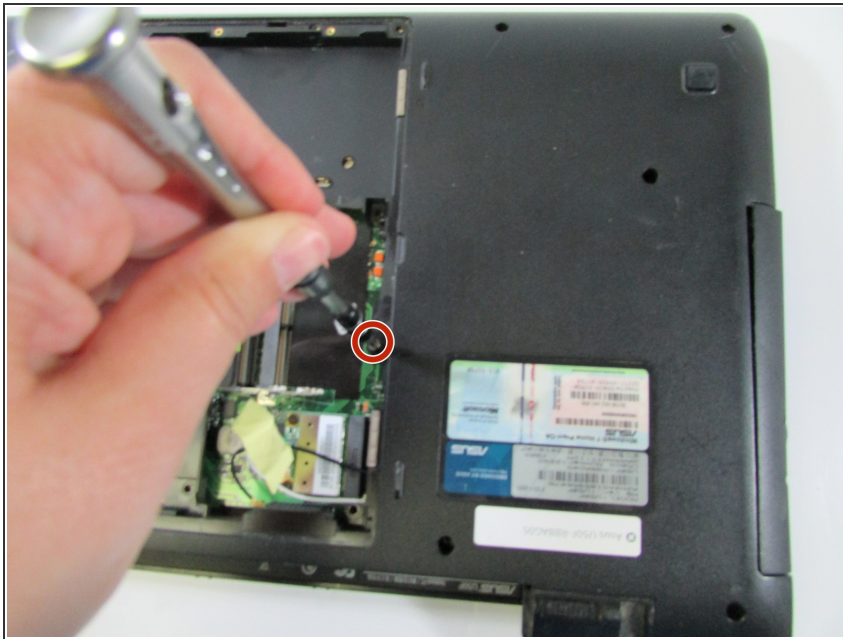

- Remove 1 screw

Step 12



- Use the plastic opening tool to push the drive out from the back.



Step 13



- Pull drive out and remove completely.


i Tip: When reassembling the drive, put the laptop right-side-up. Then, push the drive all the way in. Finally, flip back over and continue with the directions. (Otherwise the drive will catch and be difficult to reassemble)

Step 14 — Fan and Heat Sink (attached together)

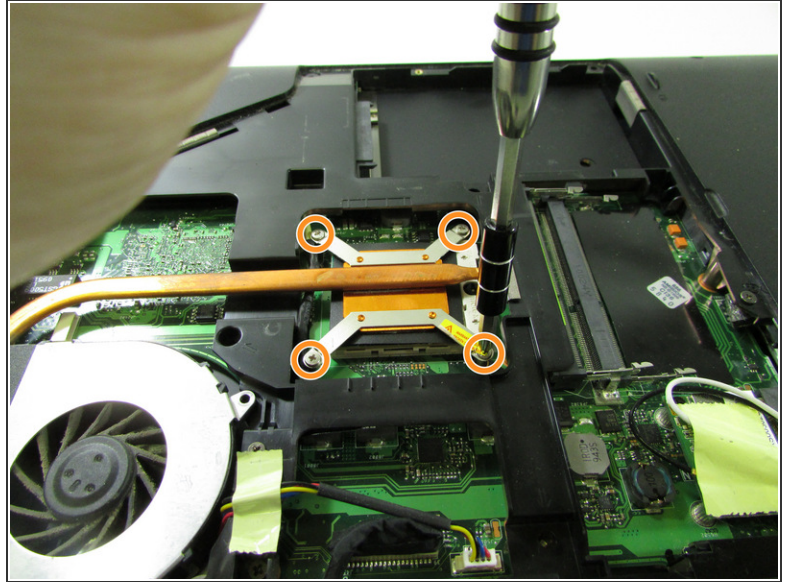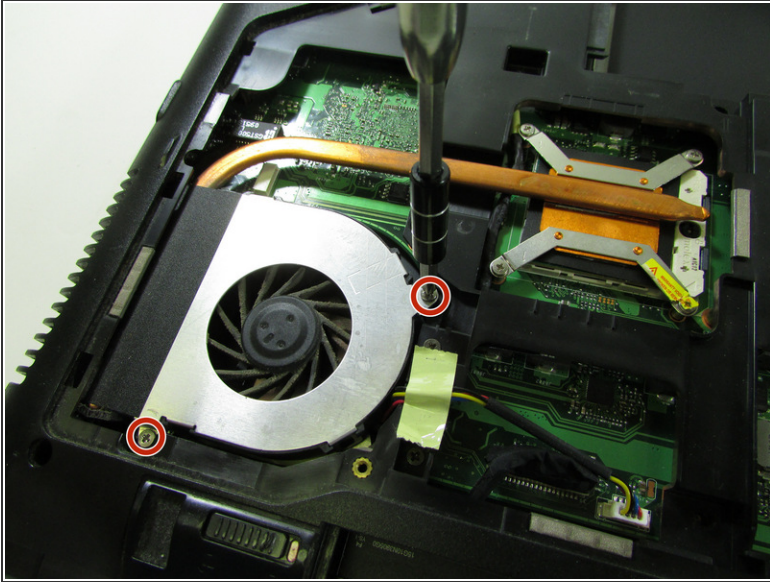


- Remove 2 screws on the fan
- Remove 4 screws on the heat sink

Step 15

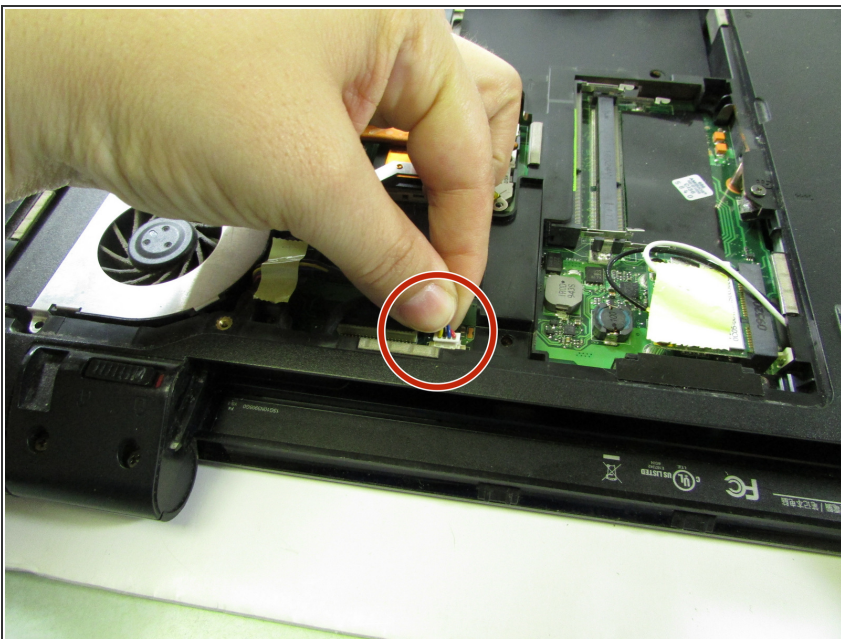

- Remove 1 Bundled Cable Connector: Pull the cable away from the connector in the same direction as the individual wires are running.
- ⚠ Pull evenly on the full width of the cable so that no individual wires are overly strained.

Step 16

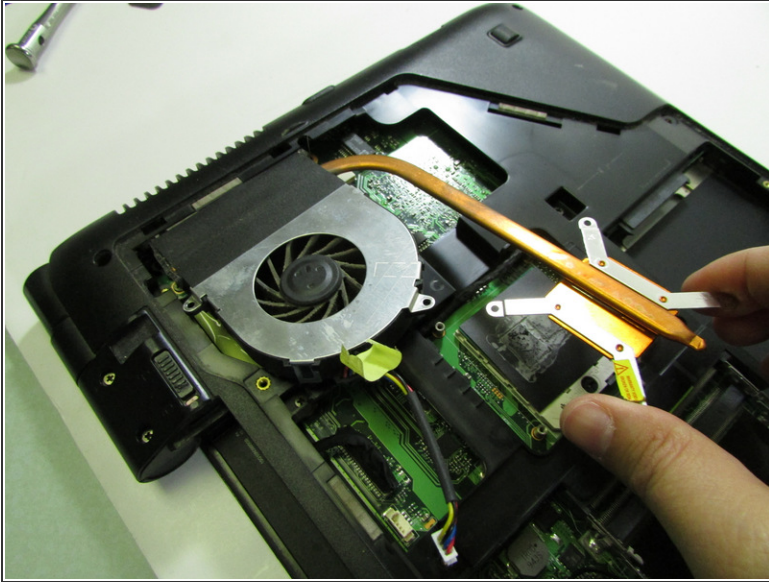


- Pull up the heat sink a bit and then pull back (there's an overhanging piece of the lower panel near the fan that you have to scoot out of)
- Then lift and remove the whole device

Step 17 — Keyboard





- Insert one of the pry tools under a top corner and the other tool under the side of the top corner (make sure to get under the metal of the keyboard, not just the first layer of plastic). Then pry the corner down and out from under the little overhang its sitting under.
- Next, slide the pry tool on the top over to the next overhang and insert the second tool on the other side. Push down and pry out the keyboard.
- Repeat all the way down to the opposite corner.

Step 18

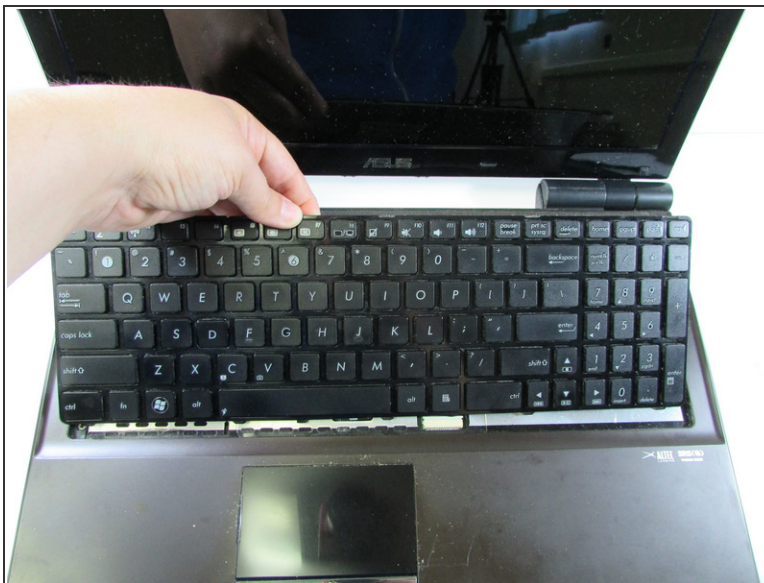



- Once the keyboard is free, lift it up slightly and release the cable connection underneath.

Step 19

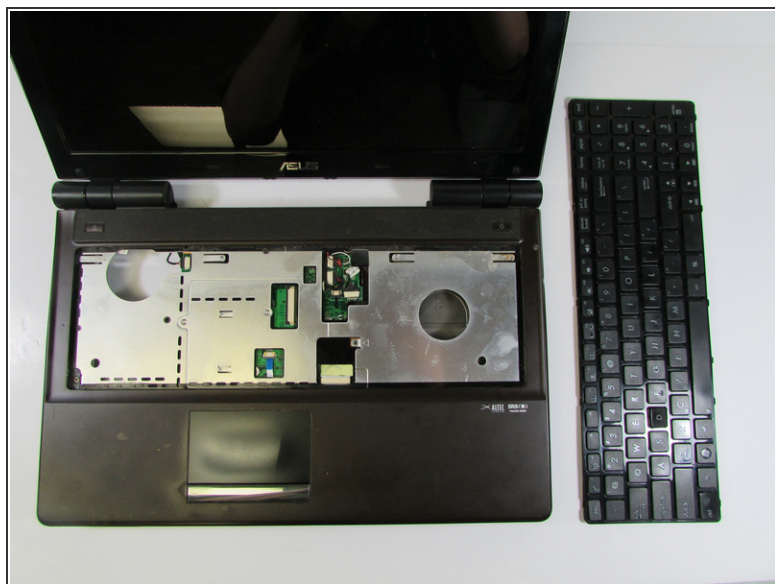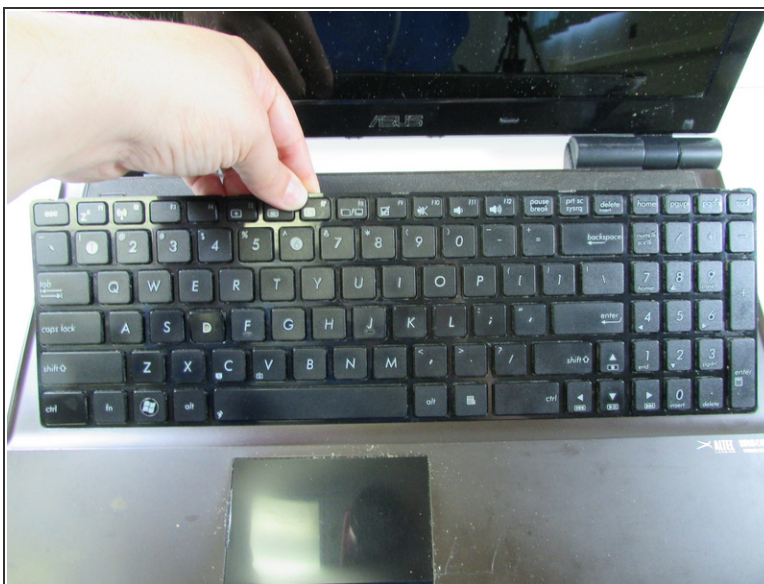



- Remove the keyboard completely.

Step 20 — Upper Case

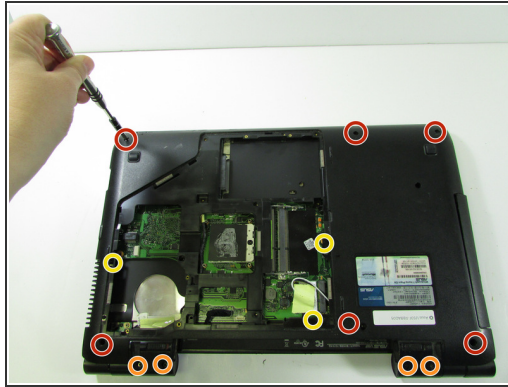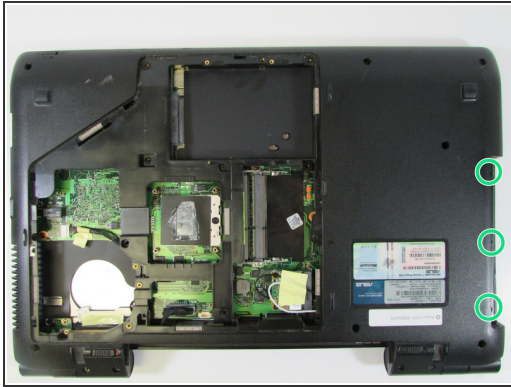


- Remove 3 screws in the optical drive area
- Remove 6 screws on outer lower case
- Remove 4 screws on hinges
- Remove 3 screws on inner lower case

Step 21

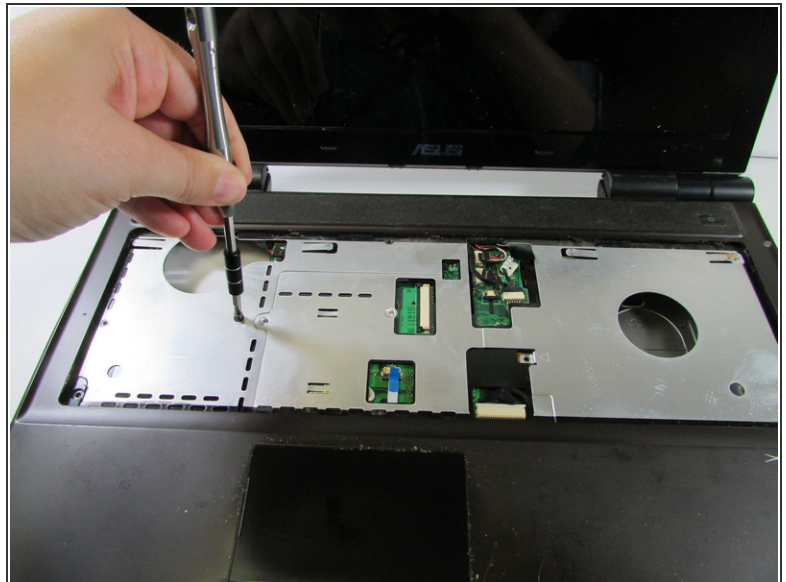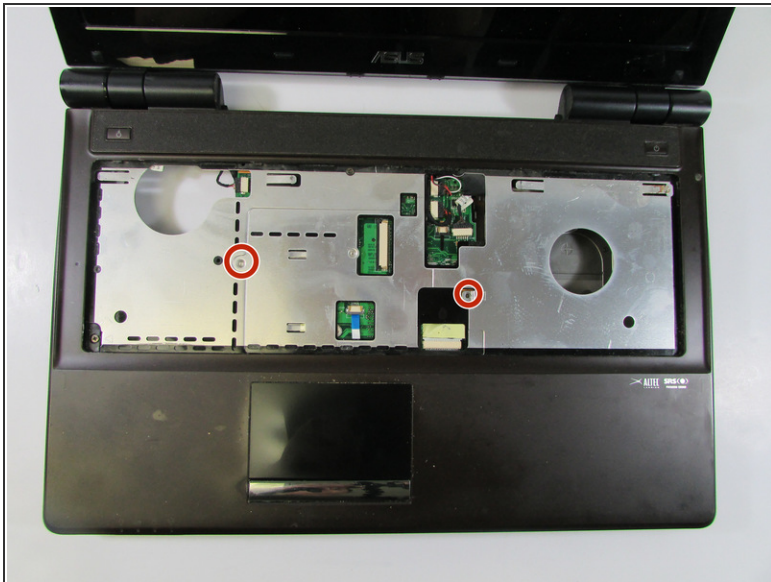




- Remove 2 screws

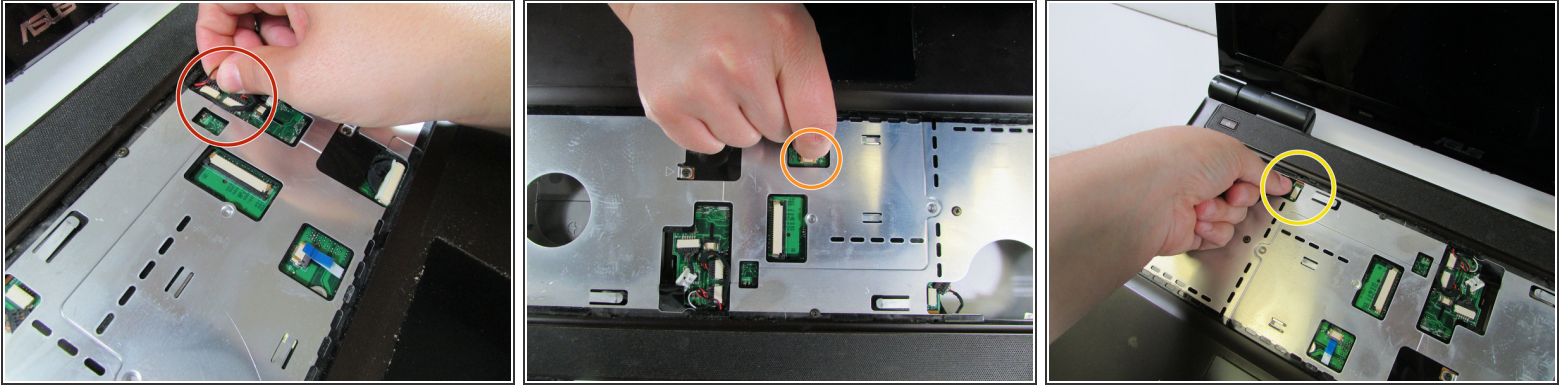
Step 22



Upper Case: Disconnect Wires

- Disconnect 2 Bundled Cable Connectors: Pull the cable away from the connector in the same direction as the individual wires are running.
-  Pull evenly on the full width of the cable so that no individual wires are overly strained.
- Disconnect 1 No-Fuss Ribbon Cable connector: pull it straight out of the connector.
-  These kinds of connectors are fairly rare, so check carefully for a way to release the connector before you resort to pulling on the ribbon cable.
- Disconnect 1 Bundled Cable Connector: : Pull the cable away from the connector in the same direction as the individual wires are running.
-  Pull evenly on the full width of the cable so that no individual wires are overly strained.

Step 23

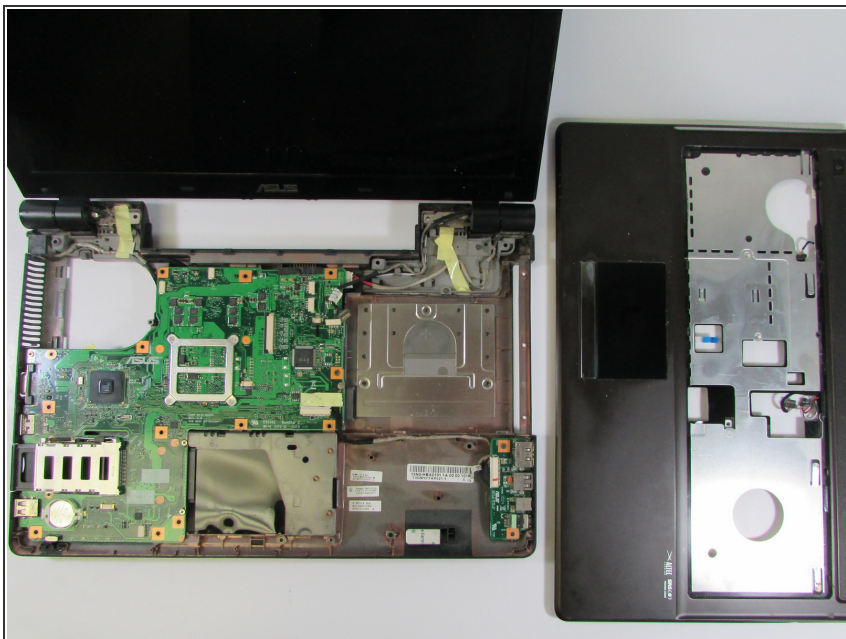

- Remove Upper Case

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-09-21 08:06:10 AM.